


# FRAME HEATER

(Model: 6AST、6AT)

## User Manual

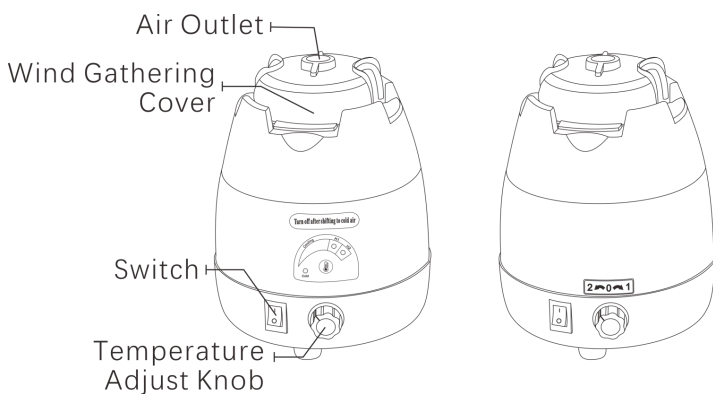

## Preface

You are welcome to buy the frame heater produced by our company. This machine uses ceramic heating, which has the characteristics of fast temperature heating and large air output to ensure that the frame is uniformly heated. Before your first use, please read the manual carefully.

## 1 Characteristics

	6AST	6AT
Rated Voltage	220VAC $\pm$ 10% 50/60Hz or 110VAC $\pm$ 10% 50/60Hz	
Rated Power	Max 500W	
Switch Icon	Cool Wind H1(Low Temperature) H2( <b>High</b> Temperature)	2( <b>High</b> Temperature) 0 Cool Wind) 1(Low Temperature)
Wind Speed	2.0~4.0 m/s	
Decibel	$\leq$ 70 dB(A)	

## 2 Caution

1. Please ensure that the air inlet and outlet are not blocked before use;
2. It should be placed on a horizontal workbench during use;
3. The continuous heating time of grade II cannot exceed 60 minutes;
4. Do not use water, water into the air outlet will lead the circuit problem.