

Frame Warmer



Use's Manual

Forword

Dear customers

Thank you for purchasing model -6C Frame Warmer.It makes features of quick heating,strong air output and heating the frame evenly.Please read this manual

The parts



Notices

Before using, please check and see if the electric wire is available for use, if there are any obstructions in air inlet, the left-right pendulous parts are loosened and the input of electric source has electricity.

When it's used, please connect the electric source firstly and then turn on the switch. It can prolong the notor service life by avoiding over-high instantaneous voltage.

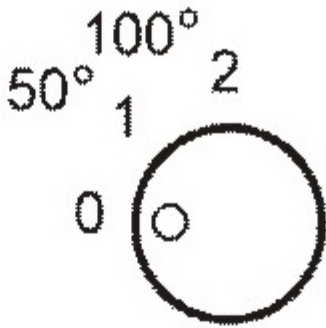
When it's used, don't switch over frequently. Keep the input voltage steady. Prolong the service life of switch and motor.

Once the following unusual problems occur: Over-high temperature, cacophony, noise, rotary speed is decreased suddenly, the motor stops working, burned smell, something is blown out from the outlet.

Please turn off the switch immediately, check it carefully to find out the breakdown and re-start this machine until you solve the relative problems.

Main specifications

Rated Voltage	220V 110V	Heating temperature(Max)	110℃
Rated Frequency	50Hz 60Hz	Noise	≤70dB(A)
Rated Power	500-650W	Protection Class	II for the Electrical Appliances

Power for Heating coil	500-650W	Temperature Adjustment	
Power for Induced fan	3 W		
Air Flow Rate	1 -2.0m/s 2-4.0m/s	Weight	0.7kg

Warning

- (1). Don't heat the frame too long at one time. Discontinuous using can prolong its service life.
- (2). Don't use this machine when the voltage is not steady. Please keep good grounding.
- (3). Don't drop the water into the machine inside. Otherwise, the electric source may be circuit-broken and the electric motor may be burned out.



The sign of prohibiting water's drop-